

Installation instructions

FHP FLEX SQUARE



Measure the desired height



Take out upper section from floor gully: extension ring with adaptor and grating. After that, take out adaptor and grating from the extension ring.



Cut off the required amount from the **upper** edge of the extension ring.



Reassemble. Press together the upper section and floor gully. Check the height. If the desired measurement is not attained, redo the stages described above and cut off another piece.