



Installing PURUS floor gully with brick/tiled floor, using 13 mm putty compound. The membrane is connected with clamping ring.

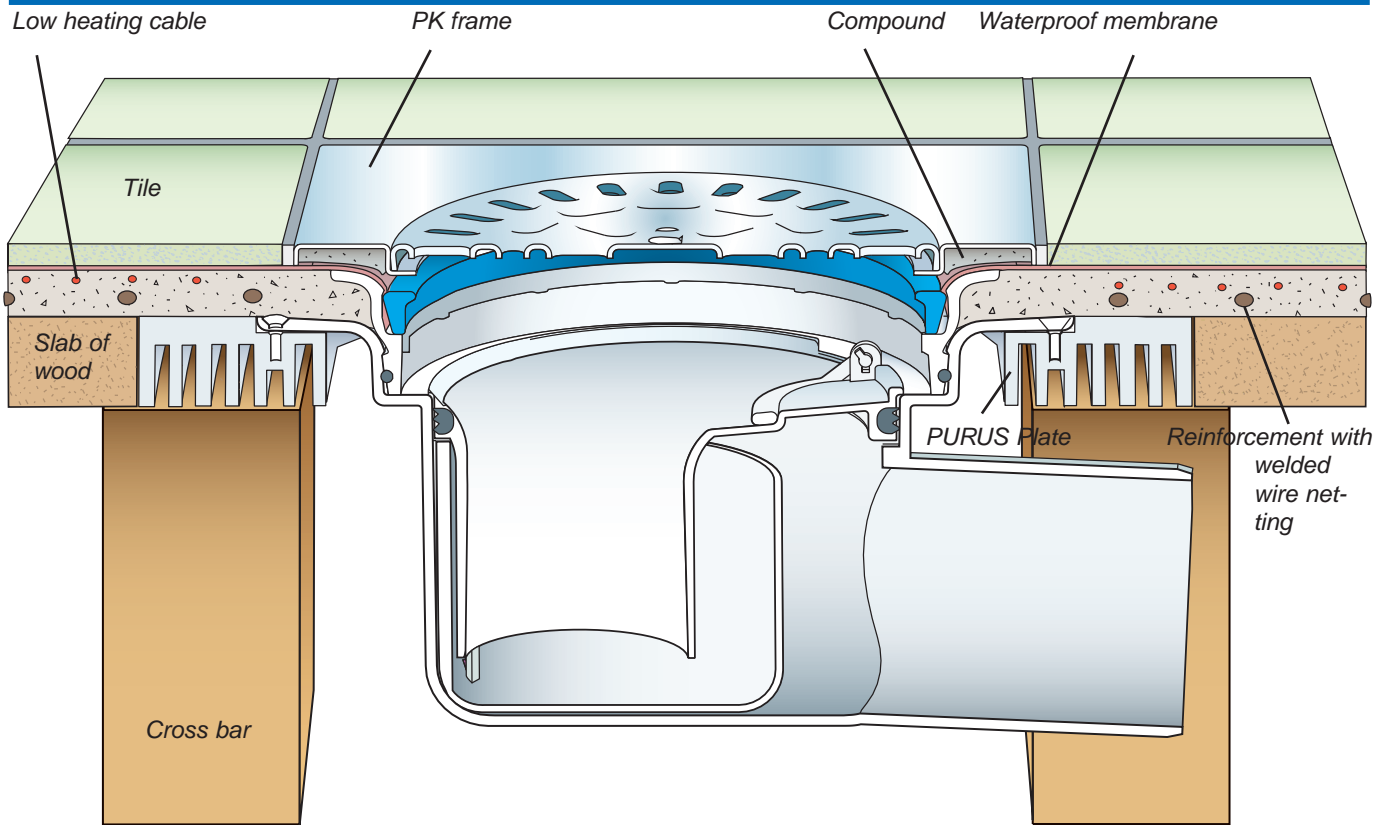

PURUS KNIFE: FOR CUTTING HOLE IN THE VINYL CARPET/MEMBRANE



A gentle pressure on the middle of the arm releases the knife holder and the blade

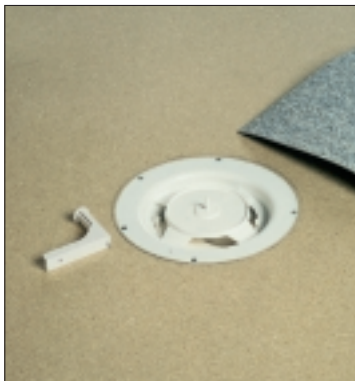

(1) Place the foot of the knife in the floor gully.



(2) Lay the vinyl over the gully and press until the pivot on the foot penetrates the vinyl.



(3) Put the arm of the knife on the pivot (the smallest hole) and cut the hole.



To change the blade, the holder is pulled up. Blade: Stanley 5903.



(4) Take up the foot of the knife.



(5) Heat the vinyl. NOTE: rubber cloths shall not be heated.



(6) Place the clamping ring in the gully with the text facing upwards. Press it down with the grating.